

the

## AMS42-USB

5B Amplifier Measurement System (USB)

## All-In-One Measurement System. Compact. DAQ via USB.


The AMS42-USB, a complete solution: amplifier technology and data acquisition. A high-quality USB data acquisition system is already integrated. Available in a robust aluminum housing as a mobile tabletop unit with skid-proof, tip-up feet.

## Modular Concept. Equip Individually. Be Flexible.

The AMS device is equipped with cassettes, on which the required 5B measuring amplifiers are mounted. The variety of available 5B modules allows for the optimum adaptation of the AMS42-USB to any special measuring task.

## Choose Connector. Mount 5B Amplifier. Done.

The available plug-in cassettes have different connectors on the front panel. Depending on

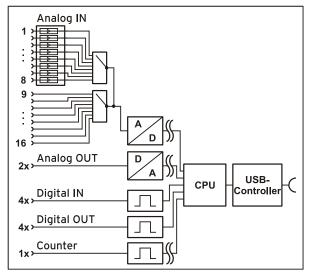



sensor or signal to be connected, the suitable cassette can be chosen. Now the 5B module only has to be fixed on the cassette and be integrated in the AMS system.

## Clearly Safe.

The galvanic isolation provided by the 5B modules guarantees interference-free operation and protects the DAQ system and the PC against high potentials.

## Analog. 16 Inputs. 2 Outputs.

Signals are connected at 8 amplifier inputs with 16 bit resolution and 250kHz total sampling rate. Additional 8 analog inputs and 2 analog outputs are available directly and without amplification at a D-Sub 37 female.

# Digital. 4 Inputs. 4 Outputs. 1 Counter.

Digital states are recorded or set at four digital inputs and outputs each. For pulse measurements, an additional isolated counter input is provided.

## Plug & Play with USB.

The connection to the PC is realized via USB. The AMS42-USB provides all typical USB features (e.g. Plug&Play, Hot-Plug).


## Optimal for Windows.

The drivers and programming interface is optimized for 64Bit under Windows® 10/11. All software for installation and programming of the AMS42-USB is included free of charge.

Functional diagram


### 1 Start-up procedure

All available software and documentation for the AMS42-USB are located on <u>http://www.bmcm.de/ams42-usb-en</u> in the tab **Downloads**.



#### 1. Step: Installation device driver

Install the latest driver package in order to use the USB measurement device. You will find the package on <a href="http://www.bmcm.de/ams42-usb-en">http://www.bmcm.de/ams42-usb-en</a> in the tab <br/>
Downloads in the category BMCM – Drivers.



#### 2a. Step: Measuring with NextView


To be able to use your measurement system with NextView, you just need to download and install the latest version of NextView on <a href="http://www.nextview.de/go-en">http://www.nextview.de/go-en</a>. In case you did not buy NextView, request a free of charge trial version when first starting NextView. Find more information about NextView and its installation on <a href="http://www.nextview.de">www.nextview.de/go-en</a>.



#### 2b. Step: Measuring with API

In case you want to use the measurement device without NextView, you need to download and install the free of charge programming interface LIBAD4. You can find this on <a href="https://www.bmcm.de/ams42-usb-en">www.bmcm.de/ams42-usb-en</a> in the tab **Downloads** in the category **LIBAD – Programming Interface (API)**, too. Find more information on <a href="https://www.bmcm.de/libad-en">www.bmcm.de/ams42-usb-en</a> in the tab **Downloads** in the category **LIBAD – Programming Interface (API)**, too. Find more information on <a href="https://www.bmcm.de/libad-en">www.bmcm.de/libad-en</a>.

## 2 Installation

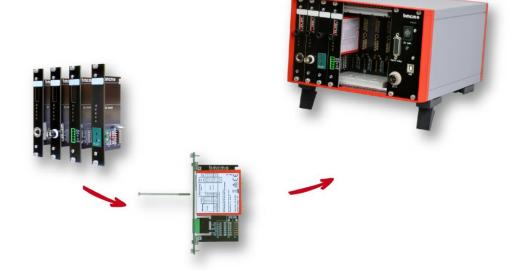

#### 2.1 Assembly

- a) Equip the AMS42-USB with the plug-in cassettes (see chapter 6.2) carrying the required 5B modules.
- b) Carefully push the cassette along the guide bars of the relevant slot until the 7-way pin connector of the cassette and the pins of the 5B module are plugged into the corresponding connectors on the AMS backplane.
- c) If using the option *AMS-EXT8* for the AMS42-USB (see chapter 6.4), the additional cassettes 9-16 are mounted on the back of the device.
- d) For a tight installation, fix the front panel at both ends with screws to the housing. Bridge unneeded slots by a blank panel (AMS-K-BLANK) to protect the device against outside influences.

#### 2.2 Software Installation and Start-up Procedure


- a) Install the bmcm driver package (see chapter (see chapter 1) on the PC/notebook before connecting the AMS42-USB to a free USB interface.
- b) Connect an external power unit to the 3-pin DIN coupling for 9-40V power supply (use a supply cable with a cross sectional area >1mm<sup>2</sup>) and turn on the AMS42-USB by pressing the switch to "1" (ON) (see chapter 3.1 and 3.3).
- c) Start the Plug&Play installation (see chapter 1). If necessary, further software components can be installed now, as described in chapter 1.
- d) Eight analog input signals can be connected at the specific connector of the respective AMS cassette panel. The other analog channels as well as digital lines are available directly and without amplification at a 37-pin and a 15-pin D-Sub female connector (see chapter 3.5 and 3.6).
- To change the cassettes, the power of the AMS device must be turned off!
- If the AMS system is operated standalone, additional grounding to enhance shielding is recommended but not mandatory.

## 3 Connections / Assignments

All available connectors and operating elements of the AMS42-USB are accessible on the right-hand side of the device front and back.

#### 3.1 Switch

The supply of the 5B modules of the AMS42-USB is turned on (press "1") and off (press "0") with the switch at the front. This is indicated by the green LED "ON AMPL". The DAQ unit is supplied by the PC.

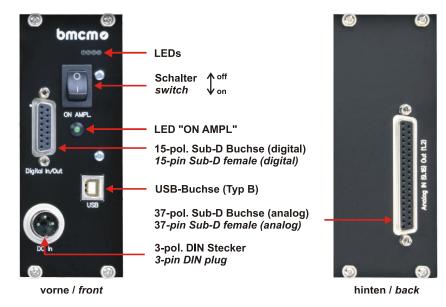


#### 3.2 LEDs

The two LEDs on the front of the device indicate various states. As already mentioned, the LED "ON AMPL." is on, when the 5B modules are powered with 9-40 DC IN (switch on "1" position). The other LEDs show the supply of the USB data acquisition unit and of the integrated measuring module by the PC (5V) or signalize the transmission of commands to the PC.

#### 3.3 Power Supply "DC In"

The installed 5B modules are supplied with power (9..40V) via the 3-pin DIN plug with the following assignment. A power supply unit *ZU-PW40W* (24V, 1.67A DC) is optionally available.

Pin	Assignment	
1	n. c.	
2	ground (GND)	
3	9-40V DC	



#### 3.4 USB

The standard USB connector (type B) serves for the PC connection of the data acquisition unit integrated in theAMS42-USB. Power supply is also provided via the USB interface.

	1

#### 3.5 Analog Channels

#### 3.5.1 Measuring Amplifier Inputs

Eight analog signals can be connected to the amplifier inputs available at the respective connectors of the cassette panels. Their assignment is illustrated in the data sheet of the *AMS-K* cassettes (see chapter 6.4).

Additional 8 amplifiers inputs can be added with the option *AMS-EXT8* (see chapter 6.4) at the back of the device.

Depending on the application, the shield of the analog input cables can be applied to ground or 0V. Be sure to connect at one end of the cable only. Run the signal ground separately if possible. Lay input cable separately if possible.

## Measurements can be effected on various potentials. The potential deviations, however, should not exceed 60V DC (according to VDE Association of German Electrical Engineers).

#### 3.5.2 Analog Outputs and Other Analog Inputs

The 37-pin D-Sub female connector at the back of the device is designed for the direct and non-amplified connection of the remaining analog inputs 9..16 and the analog outputs 1+2. The input range ( $\pm$ 10V,  $\pm$ 5V,  $\pm$ 2V,  $\pm$ 1V) is set via software (e.g. in **NextViewe**), the output range is  $\pm$ 10V, the resolution is 16 bit respectively.

Pin	Assignment	Pin	Assignment
18	n. c.	15	Aln 15
9	Aln 9	16	Aln 16
10	Aln 10	17	n. c.
11	Aln 11	18	AOut 1
12	Aln 12	19	AOut 2
13	Aln 13	2027	n. c.
14	Aln 14	2837	AGND

AIn = Analogeingang / analog input
 AOut = Analogausgang / analog output
 AGND = analoge Masse / analog ground
 n. c. = nicht verbunden / not connected

The max. potentials to ground must not exceed  $\pm$ 12V. Any channel overload may influence measurements of other channels and may lead to wrong values.

#### 3.6 Digital Channels


The AMS42-USB features 4 digital inputs and outputs each (*low*: 0V..0.7V; *high*: 3V..5V) and an isolated counter input. The 5V auxiliary voltage at pin 6 can be used e.g. for sensor supply.

All connections are led to the 15-pin D-Sub female connector on the back of the device. The following table and figure show the pin assignment.

With the option *AMS-DIG4* (see chapter 6.4), 4 inputs and outputs each can be used as galvanically isolated optocoupler inputs and relay outputs available at the back of the device.

Pin	Assignment	Pin	As
1	DOut 1	5, 13	DG
9	DOut 2	6	Vus
2	DOut 3	7	COL
10	DOut 4	14	COL
3	DIn 1	8, 15	n. c
11	DIn 2		
4	DIn 3		
12	DIn 4		

	Pin	Assignment		
	5, 13	DGND		
	6	V <sub>USB</sub> (4-5V; max. 20mA)		
	7	counter input low		
	14	counter input high		
	8, 15	n. c.		

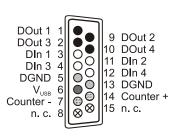

- O DIn = Digitaleingang / digital input
- DOut = Digitalausgang / *digital output*
- O DGND = digitale Masse / digital ground
- 4-5V; max. 20mA
- Zählereingang / counter input
- $\otimes$  n. c. = nicht verbunden / not connected


- The digital lines are protected by 1kΩ resistors. If the input voltage is not within the permitted voltage range of 0..5V, the device may be damaged.
- The digital inputs and outputs are not galvanically isolated except for the counter.
- The digital ground (DGND) is connected with the PC ground.

## 4 Interfacing Examples for the Digital Lines of the AMS42-USB

The following basic connection examples demonstrate the use of the digital inputs and outputs and the connection of a counter to the AMS42-USB. The pin assignment of the 15-pin D-Sub female connector is described in chapter 3.6.

#### 4.1 Interfacing Examples for the Counter Input

The galvanically isolated 16-bit counter is connected at pin 7 and 14. At maximum performance (2<sup>16</sup>-1), the counter is reset and starts from zero again.

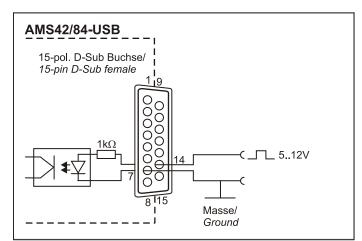

#### 4.2 Interfacing Examples for Digital Inputs


The 3.9k  $\Omega$  pull-down resistor sets the input to low if no voltage is applied there.

#### 4.2.1 Connecting an Optocoupler

Optocouplers provide optimum protection at each input line. With them, it is possible to connect higher voltages and to protect the hardware from being destroyed. In this regard, please also see application


examples of the optocoupler you use.

## Optocoupler cards featuring 8 inputs are available at bmcm.

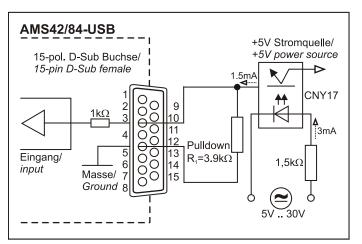

#### 4.2.2 Connecting a Push-Button / Switch

Please make sure to use a push-button with debounce protection, because otherwise several pulses might be recorded. The  $3.9k\Omega$  pull-down resistor is absolutely necessary to create a defined low signal!

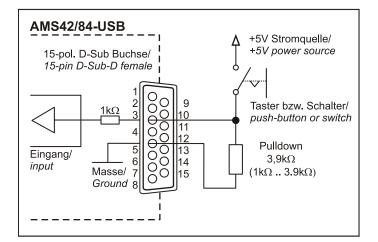


#### 4.2.3 Connecting a Voltage Divider

If connecting a DC voltage higher than 5V, a voltage divider must be used so that 5V at the maximum are applied at the device input. Exceeding the 5V input voltage might cause damages to the device.

The relation between the two resistors to be used is calculated with the following formula:  $U/U_1 = (R_1+R_2)/R_1$ 

Input voltages less than 5V are also sufficient  $(high \ge 3V)$ .

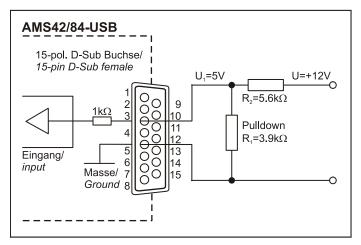


#### 4.3 Interfacing Examples for Digital Outputs

Serial resistors in the output lines limit the current and protect the hardware from being destroyed.

#### 4.3.1 Connecting an LED

Only so-called low-current LEDs can be used, because they already work with 1mA current.


Please also observe the total current listed in the technical data (see chapter 8).

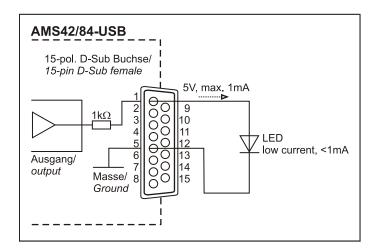

#### 4.3.2 Connecting a Relay


A connected relay is ideal to switch higher currents. Since the field coil of the relay requires a higher current than provided by the measurement system at one line, a transistor is connected ahead.

## Relay cards featuring 8 outputs are available at bmcm.

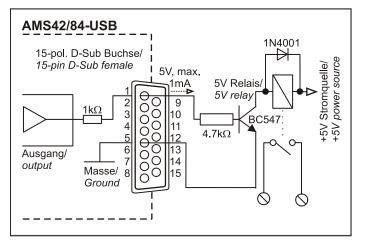


#### 4.3.3 Connecting a Lamp

A transistor can be used to switch higher loads. The selected transistor must comply with the maximum switchable current. The figure on the right shows an application with a maximum current of 100mA.

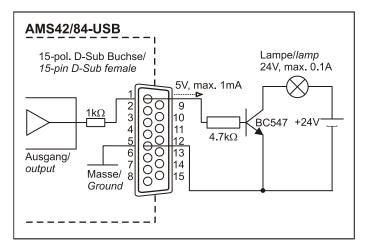

## 5 AMS Backplane

The AMS-backplane provides 8 slots for 5B modules and the *AMS-K* plug-in cassettes (see chapter 6.2) carrying the 5B modules. If the AMS42-USB is used with the optional add-on *AMS-EXT8* (see chapter 6.4), eight slots each are available on the front and on the back of the device.

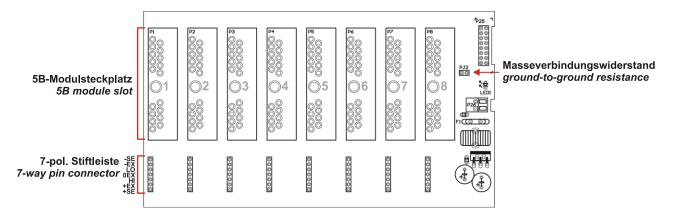

#### 5.1 Ground-to-Ground Resistance


Ideally, the output ground is not electrically connected with the power supply ground. If, however, a connection to ground is necessary (e.g. to use the output switch in the 5B module), the 2-pin jumper (see fig. above) must be closed.

## In the case of electrically connected systems (e.g. PC), this jumper represents a high-resistance bridge $(1k\Omega)$ and may generate a hum loop!

#### 5.2 Module Pin Assignment

The pin assignment on the right shows the top view of the module backplane (see chapter 5).

The pin assignment corresponds to the 5B modules of Analog Devices<sup>®</sup>, BURR BROWN<sup>®</sup> etc. However, an additional 0EX pin has been introduced, which is particularly suitable for ungrounded shielding. This is a specific assignment of BMC Messsysteme GmbH. This pin is not connected in modules of other manufacturers.

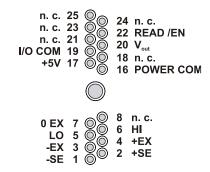

#### 5.3 Fuse

The fusing of the AMS backplane is effected on the backplane (see chapter 5) with one reversible semi-conductor fuse. In case of overload, it turns off. To make the fuse work effectively again, first remove the cause for overload before disconnecting the power supply of the AMS42-USB.

#### 5.4 Connection for AMS Cassettes

The cassettes are connected to the AMS backplane via 7-way pin connectors (see chapter 5), leading the input signals connected at the cassette panel to the backplane. The assignment of the 7-way female connector on the board is illustrated in the figure on the right-hand side.

-SE	-	7	Ο
-EX	-	6	0
LO	-	5	0
0EX	-	4	0
HI	-	3	0
+EX	-	2	0
+SE	-	1	

## 6 Supplementary Products for the AMS42-USB

### 6.1 5B Modules (MA Line)

The 5B measuring amplifiers from bmcm allow for the professional signal adjustment to a data acquisition system. The amplifier output is  $\pm$ 5V or 0..5V. Most of the modules are electrically isolating and provide sensor supply.

The following 5B modules from bmcm are available:

Product	Description	
MA-UNI universal amplifier with galvanic isolation for U, I, R, thermocouple, strain gauge, LVDT		
MA-UI multi-range amplifier with galvanic isolation for U, I		
MA-U voltage measuring amplifier with galvanic isolation, 50kHz bandwidth		
MA-P09/12/15	power supply modules ±9V/ ±12V/±15V	

### 6.2 Plug-in Cassettes (AMS-K Line)

The amplifier system can individually be equipped with 8 plug-in cassettes (or 16 with option *AMS-EXT8*, see chapter 6.4). Each cassette is equipped with the relevant 5B module and suitable input connector.

The suitable input connector on the front panel guarantees for the relevant connection to be available when exchanging the cassette.

The following cassettes are available:

Product	Description
AMS-K-BIN5	cassette with panel and 5-pin Binder female connector (712 series)
AMS-K-BLANK	blank panel
AMS-K-BNC	cassette with front panel and BNC female connector
AMS-K-CO5	cassette with front panel and 5-pin terminal connector
AMS-K-THK	cassette with front panel and thermocouple socket (type K)

### 6.3 AMS-HANDLE2

For mobile use, the AMS42-USB can be equipped with two stable handles at the housing frame (*AMS-HANDLE2*).

### 6.4 AMS-EXT8, AMS-DIG4

With the add-on option *AMS-EXT8*, the analog inputs 9..16 are available as amplifier inputs, and four opto-isolated digital inputs and four relay outputs with the option *AMS-DIG4*. These channels are accessible at the back of the amplifier

measurement system and not at the 37-pin or 15-pin D-Sub female of the device anymore (see chapter 3.5.2 and 3.6).








## 7 Important Notes for Using the AMS42-USB

- The device is only suitable for extra-low voltages please observe the relevant regulations! Only use the device with housing closed. ESD voltages at open lines may cause malfunction.
- Only use an electrical isolated power supply unit (with CE).
- For cleaning only use non-solvent detergents. The product is designed to be maintenance-free.
- For calibration purposes the device must be returned to BMC Messsysteme GmbH.
- For reasons relating to CE use shielded cables. Connect the shield to ground at one end only. Close open inputs if possible. ESD voltages on lines may cause malfunction during operation.
- When mounting the cassettes, a connection between power supply ground and chassis of the device is made via the module screw.
- The device ground and the chassis are electrically connected to the chassis of the PC, which is usually also connected to ground. Be sure to avoid ground loops since they will cause measuring errors!
- The Gain is adjusted to even values. Therefore, only 64000 values (for 16 bit) of the full range of the converter are used. As a result, the measuring ranges are slightly larger (e.g. ±5.12V) than the indicated measuring ranges so that overranges can be recognized.
- The device must not be used for safety-relevant tasks. With the use of the product, the customer becomes manufacturer by law and is therefore fully responsible for the proper installation and use of the product. In the case of improper use and/or unauthorized interference, our warranty ceases and any warranty claim is excluded.



## 8 Technical Data (typical at 20°C, after 5min., +24V supply)

Analog Channels						
Inputs (Measuring range):	8 amplifier inputs (±5V), 8 single-ended, non-amplified inputs (±10V, ±5V, ±2V, ±1V)					
Measuring range // Noise:	±10V // ±5 LSB	±5V // ±7 LSB	±2V // ±8 LSB	±1V // ±8 LSB		
Sampling rate // Resolution:			max. 250kH:	z total sampling rate* // 16 bit		
Abs. accuracy // Memory depth:		±2.5mV // on	ly depending on the size of t	he hard disk of the server PC		
Surge protection:	±35'	V (when turned on), ±20V (w	hen turned off), max. ±20m/	A in total of all input channels!		
Input resistance // Input capacity:	1MΩ (with PC turned off: 1kΩ) // 5pF					
Zero shift // Gain drop:		±50ppm/°C // ±50ppm/°C				
Frequency accuracy // Frequency drift:			max.	±50ppm // max. ±50ppm/°C		
Outputs // Output range // Output current:			2 voltage	outputs // ±10V // max. 1mA		
Galv. isolation (to PC // to each other):				ends on the 5B modules used		
* The total sampling rate is the sum of the sam adds up to 250kHz).	pling rates of the individua	I used channels (e.g. if 5 cl	hannels are scanned with 5	0kHz, the total sampling rate		
Digital Channels						
Channels // Level:		4 input and 4 output chann	els // CMOS/TTL compatible	e (low: 0V0.7V; high: 3V5V)		
Current pick-up per output pin:			1mA (with app. 4V level), ma	ax. 2.5mA (with app. 3V level)		
Surge protection:	max. $\pm 5.5$ V, protected with 1k $\Omega$ , max. max. $\pm 20$ mA in total of all channels!					
Counter:			1MHz, 16 bit, galvanically	isolated, 512V input voltage		
General Data						
Power supply:	+940V DC, ±	5%, min 3W, max. 20W (de	pends on number of 5B mod	dules used) at 3-pin DIN male		
Analog connections:	am			, Thermo) on the front panels		
		of the cassettes; other anal	log channels at a 37-pin D-S	Sub female at the device back		
Digital connections // USB connection:	all channels at	a 15-pin D-Sub female at t	he device front // standard L	ISB female connector, type B		
CE standards:	EN610			nity (PDF) visit <u>www.bmcm.de</u>		
ElektroG // ear registration:				VEEE RegNo. DE75472248		
Max. permissible potentials // Protection:				kV ESD on open lines // IP20		
Temperature ranges // Relative humidity:	operating temp2550°C, storage temp2570°C // 0-90% (not condensing)					
Dimensions (W x H x D):				23,5cm x 13,2cm x 25,6cm		
Delivery:				ce, 1m USB connection cable		
Available accessories:				s, 8-channel extension AMS-		
	EX18 for add. 8 ampl			ts and 4 relay outputs, D-Sub		
	connecting			IN, gender changer ZU37SS, ZU-PW40W (24V, 1.67A DC),		
	connecting	Cables ZUNAS/ SD/SS (D-3		rrying handle AMS-HANDLE2		
Warranty:	2 years from (	date of purchase at bmcm,	claims for damages resulting	from improper use excluded		
Software						
Software free of charge download		l	LIBAD4 SDK for C/C++ proc	ramming on Windows®10/11		
				est and operate the hardware		

professional software (versions: Professional, Lite) for the acquisition and analysis of measurement data on Windows®10/11

NextView® (optional):

Manufacturer: BMC Messsysteme GmbH. Subject to change due to technical improvements. Errors and printing errors excepted. Rev. 4.2 12.10.2023